




LG Optimus T Motherboard Replacement

This guide will show step by step instructions how to replace the motherboard on your LG Optimus T.

Written By: stacey

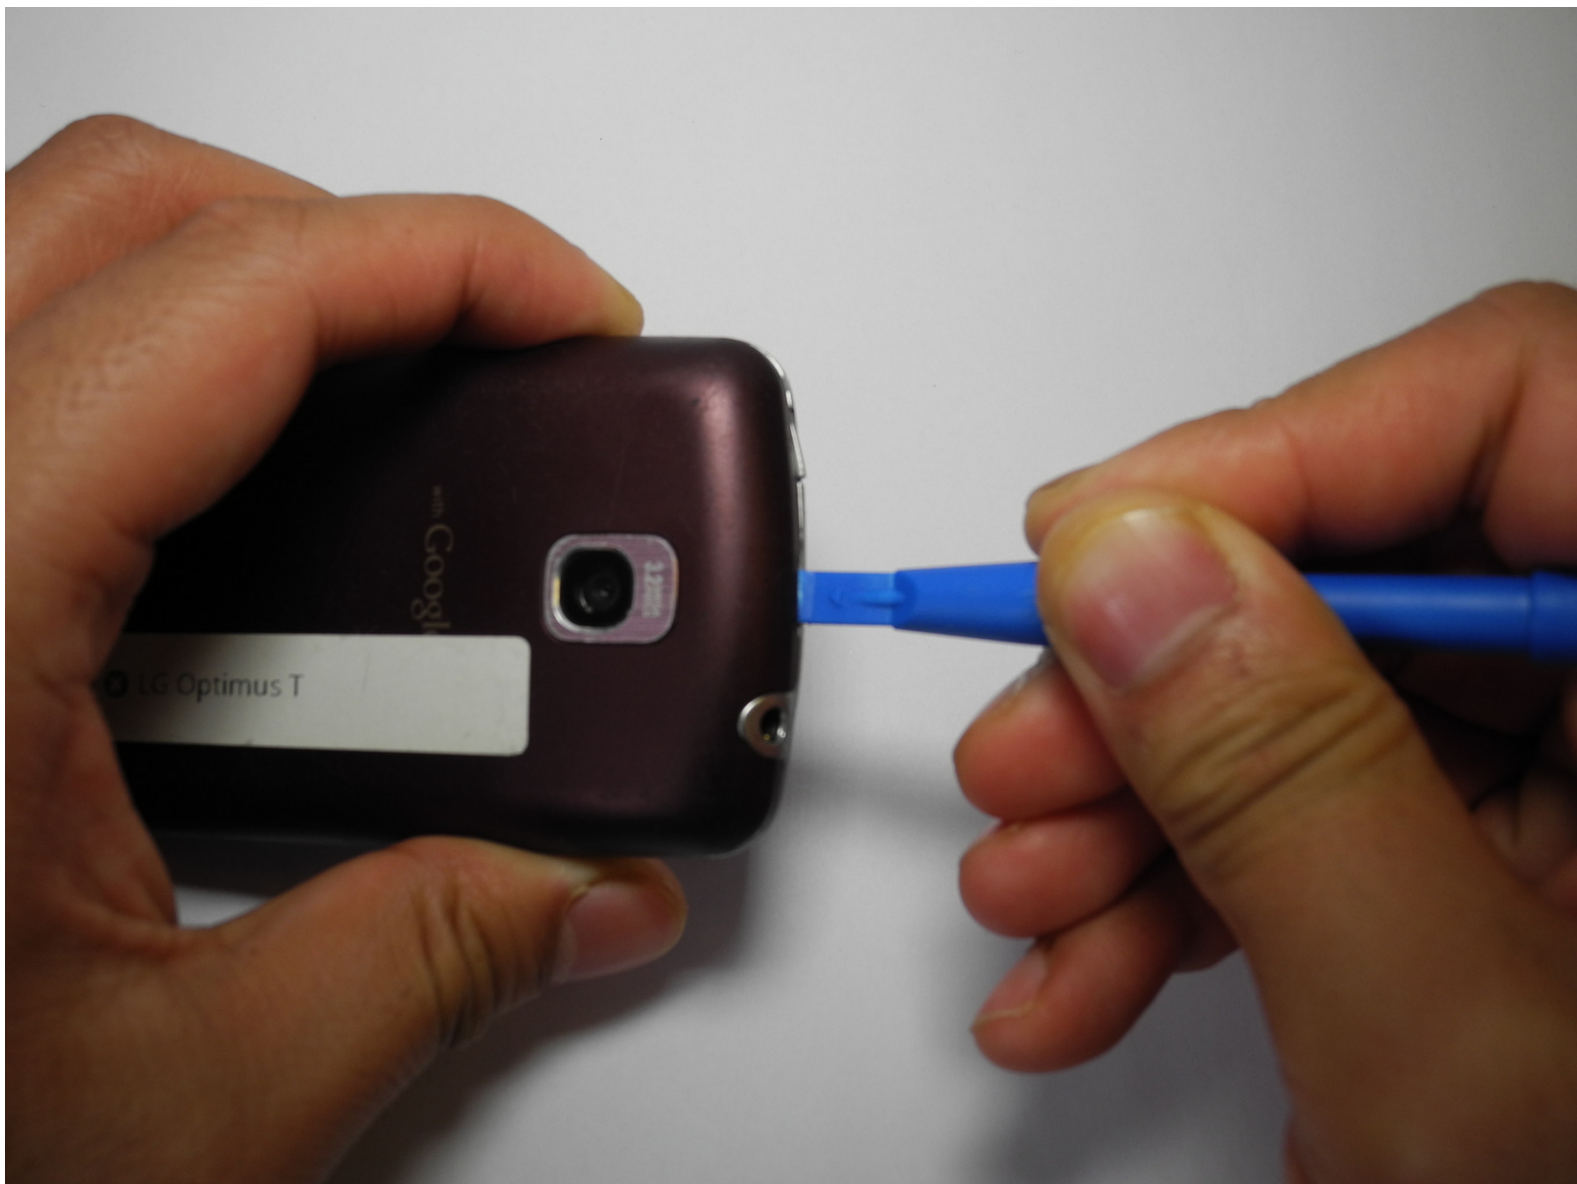

INTRODUCTION


If your LG Optimus T will not turn on, or the battery will not charge replacing the motherboard may solve these issues.




TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
 - [JIS Driver Set](#) (1)
-

Step 1 — Motherboard

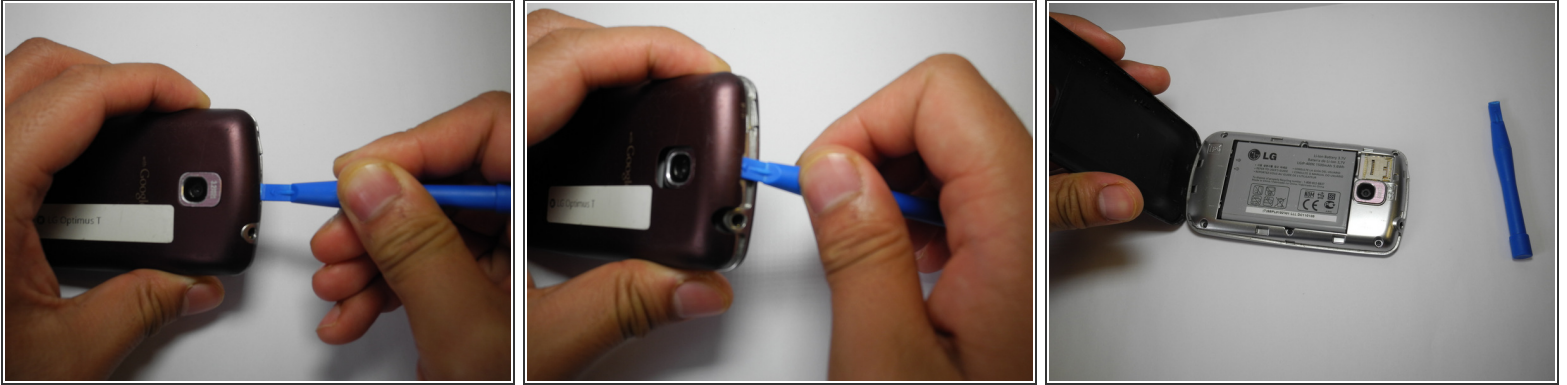

 Working on your device while it is turned on may result in electric shock. Make sure to shut down and unplug your device before you begin.

- Using a prying device, such as a plastic opening tool, remove the phone's back cover. At the top of the phone, there's an indentation to put the Spudger into to pop the case off

Step 2




- Remove the battery. There's an indentation to the left of the camera lens to pull up on the battery with your finger

Step 3




- Use a J0 screwdriver to remove the six 4.5mm screws.

Step 4

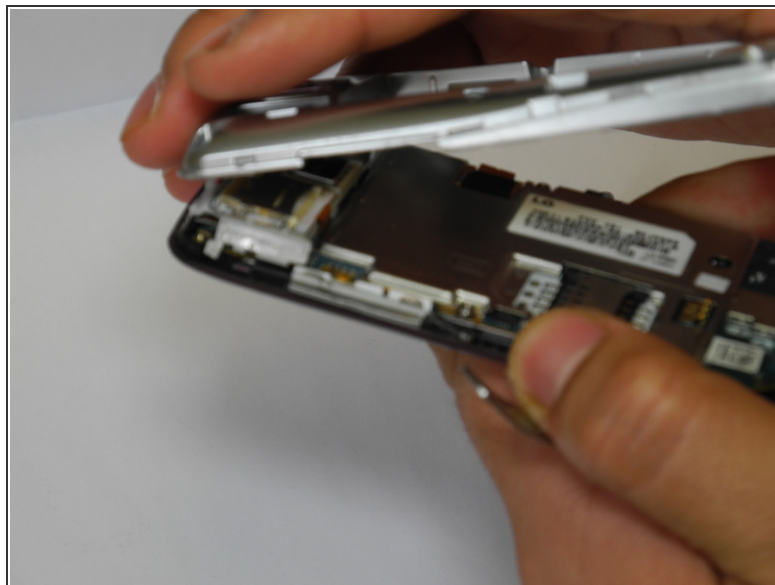



- ① You might have difficulty popping the interior case off. You may use the metal spudger here with caution if the plastic opening tool fails
- Remove interior case. Insert the spudger into the indentations at the top, or bottom of the phone to pry off the interior case.

Step 5

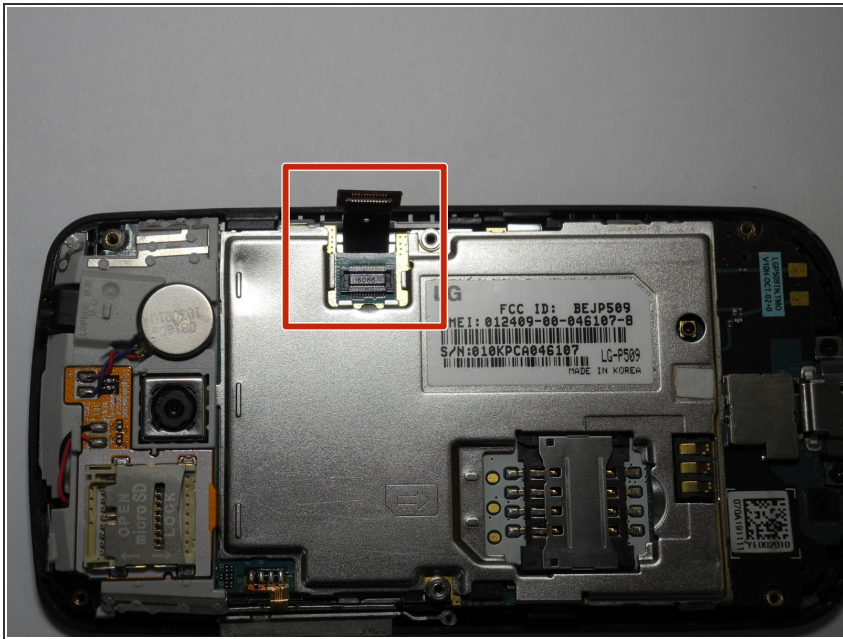


- Pull up on connector tab

Step 6

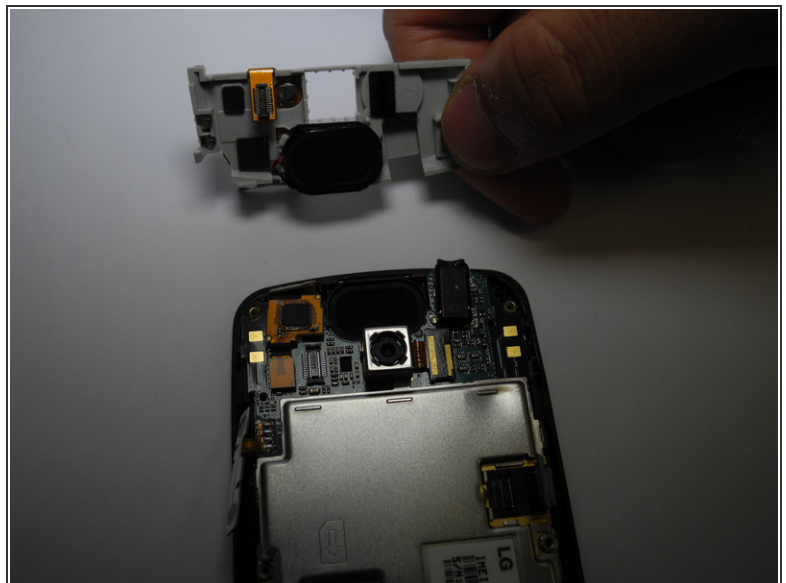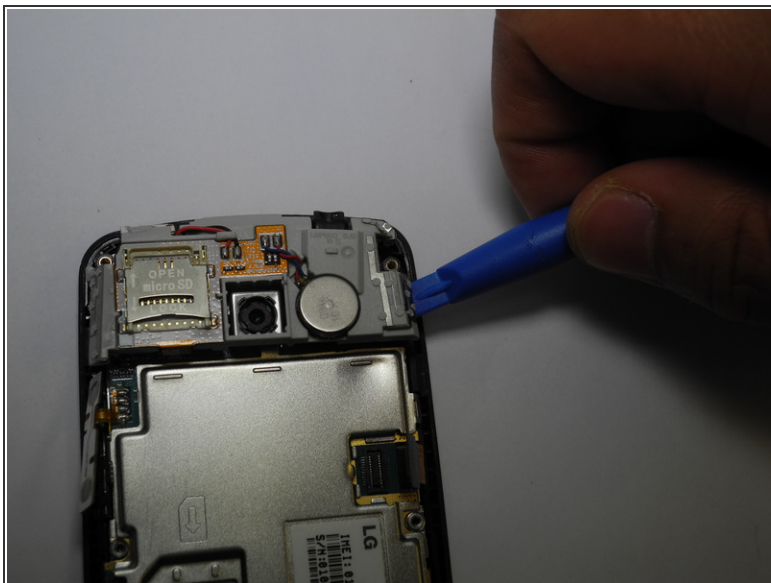


- Remove SD card mount. Insert the plastic opening tool on the right side to pop off

Step 7

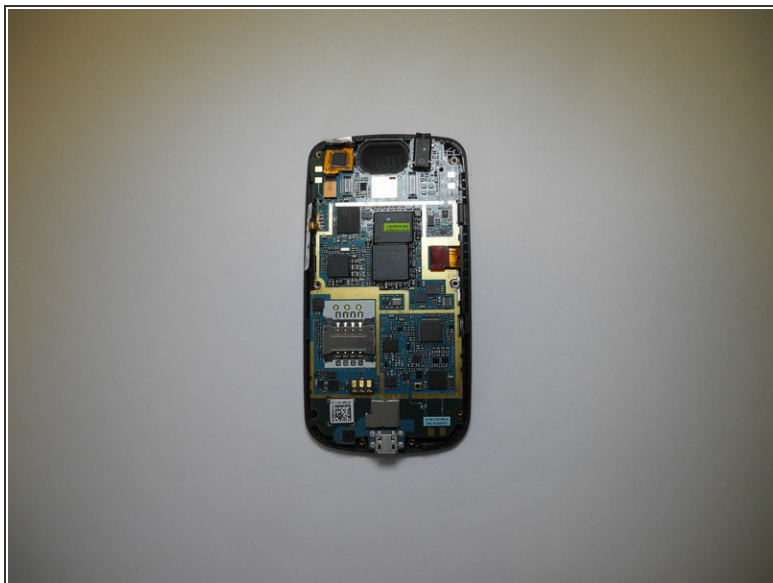

- Remove metal panel
- There are four retaining points to insert plastic opening tool and pop off panel

Step 8

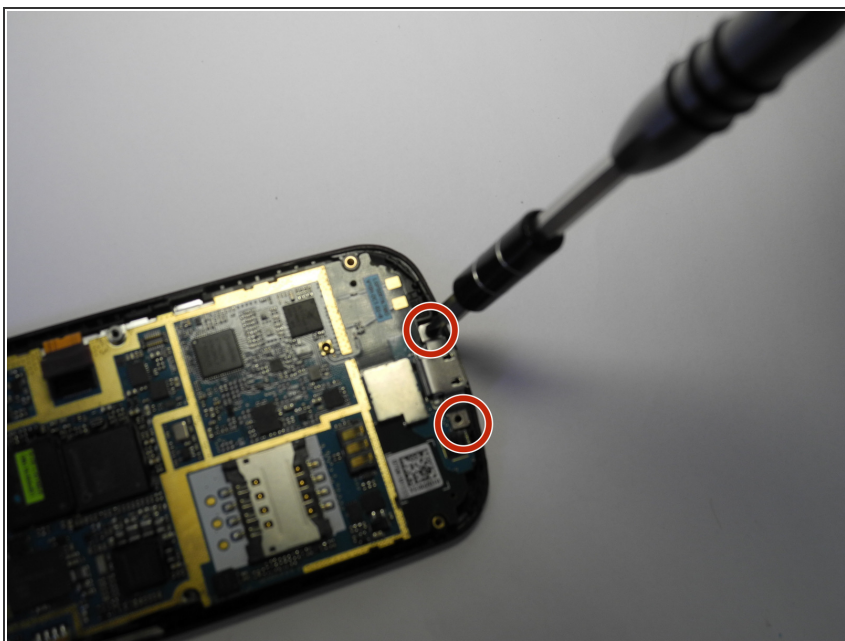

- Use a J0 screwdriver to remove the two 1.8mm screws from charging port. (Charging port and motherboard are connected.)
- Remove motherboard

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 10:13:22 AM.